



O W N E R S

M A N U A L

L400504017AAM

Lockable Diesel/AdBlue® Storage & Dispensing Kit



NSW/ACT
TEL: (02) 9677 1555
FAX: (02) 9675 1155

QLD/PNG
TEL: (07) 3204 9166
FAX: (07) 3204 1224

VIC/TAS
TEL: (03) 8787 8288
FAX: (03) 8787 8266

WA
TEL: (08) 9302 4199
FAX: (08) 9303 2095

SA/NT
TEL: (08) 8241 7111
FAX: (08) 8241 7011

NZ
TEL: (09) 447 1007
FAX: (09) 447 1008



L400504017AAM

Lockable Diesel/AdBlue® Storage & Dispensing Kit

Thank you for purchasing our product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instructions



Wear protective gloves



Wear protective clothing



Wear safety footwear

1. SAFETY

WARNING! this tank must **ONLY** be used for diesel fuel.

- Place the tank on a flat surface before filling.
- Secure the tank to strong points with ratchet straps before transporting in or on a vehicle.
- Maintain the pump in good condition (use an authorized service agent).
- Replace or repair damaged parts. *Use recommended parts only. Non authorized parts may be dangerous and will invalidate the warranty.*
- Keep the pump clean for best and safest performance.
- Ensure the power supply (vehicle battery) corresponds with the requirements of the pump (12V DC).
- Disconnect from battery when not in use.
- Keep children and un-authorized persons away from the working area.
- **DO NOT** place the tank near any heat source.
- **DO NOT** start or stop the pump by connecting or disconnecting the battery clamps.
- **DO NOT** allow the unit to get wet.
- **DO NOT** operate the pump with wet hands.
- **DO NOT** use the pump where explosive or flammable vapours may be present.
- **DO NOT** tamper with the pump connections.

fig.1A



2. INTRODUCTION

Manufactured of HDPE for the safe transportation and dispensing of diesel fuel when supplying on site equipment. Complies to ADR 1.1.3.1.C for exemption from requirements of ADR regulations. Supplied with a 12V electric pump, 4m electric cable and clamps and a 4m delivery hose with automatic fuel nozzle. Can be safely secured and transported on a pick-up truck or van, using grooves for tie-down straps and 6 handles for positioning. Supplied with lockable cover. Not suitable for petrol.

3. SPECIFICATION

Diesel Tank 400L

Diesel pump DP40012: 12V, 15A, 180W
 Duty Cycle: 30min on / 30min off
 Pump Flow rate: 40LPM
 Auto Nozzle

Adblue® Tank 50L

Diaphragm Pump GP17012: 12V
 Duty Cycle: 30min on / 30min off
 Pump Flow rate: 17LPM
 Manual Nozzle

Dimensions: 1150 (W) x 800 (D) x 860 (H)
 Net Weight: 68kg

Key: (fig.1. & fig.1A).

- 1 Breather Lid
- 2 Pump On/Off Switch
- 3 Battery Clips
- 4 Automatic Fluid Nozzle
- 5 Securing Strap Locations
- 6 Vent Plug
- 7 Fork Locations
- 8 Moulded Hand Holds

fig.1



L400504017AAM

Lockable Diesel/AdBlue® Storage & Dispensing Kit

4. OPERATION**4.1. TRANSPORT**

- 4.1.1. Move the empty tank assembly with two persons using the hand holds moulded into the base of the unit (fig.3.8).
- 4.1.2. Move by forklift truck using the fork locations shown in (fig.3.7). Ensure that the filler (fig.3.1) is closed before moving.
- 4.1.3. Secure the tank to the carrying vehicle by ratchet straps. Locations for the straps are moulded into the tank (fig.3.5).

4.2. FILLING


- 4.2.1. **DO NOT** run the pump without fuel in the tank. To do so will damage the pump's internal components and will invalidate your warranty.
- 4.2.2. The tank is filled by unscrewing the filler (fig.3.1) in an anticlockwise direction. Refit the filler cap immediately after filling.
WARNING take care not to overfill the tank.

4.3. FUEL DISPENSING

- 4.3.1. Before connecting to a battery, make sure that the pump switch (fig.5.2) is in the 'off' (O) position. Connect the battery clips to the 12V battery, observing correct polarity (red clamp to +ve terminal, black clamp to -ve terminal)
- 4.3.2. Switch the pump switch to the 'on' (I) position.
- 4.3.3. Unwind sufficient hose and place the nozzle (fig.4) in the receiving tank and pull the trigger (fig.4). Delivery will commence and continue until the trigger is released.
- 4.3.4. The trigger can be locked in one of three positions by engaging the latch (fig.4) to hold the trigger open.
DO NOT leave the nozzle unattended with the trigger latched open.
- 4.3.5. Slight pressure on the trigger will release the latch.
- 4.3.6. When the level in the receiving tank reaches the nozzle, delivery will stop automatically.
- 4.3.7. When delivery is complete, switch off the pump. Ensure the hose is wound into its housing on the tank and that the nozzle is secured in its storage place.
- 4.3.8. **DO NOT** operate the pump continuously for more than 30 minutes.
The duty cycle of the unit is 30 minutes, after which the motor must be left to cool down for a further 30 minutes.
- 4.3.9. **DO NOT** run the unit for more than 2-3 minutes with the delivery nozzle closed.

5. MAINTENANCE

- 5.1. The pump contains no user-servicable parts. Repairs should only be undertaken by competent persons.
- 5.2. Check the integrity of all the hose connections periodically. If any leakage is evident, strip the joint and wind PTFE tape around the male thread.
- 5.3. Check all electrical connections and cables for wear and damage. Rectify any faults found.
- 5.4. Keep clean, especially the dispenser nozzle.
- 5.5. Clean with a damp, soapy cloth.
- 5.6. **DO NOT** use abrasive or solvent cleaners.

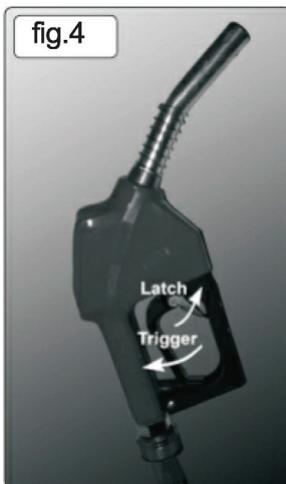
**ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



L400504017AAM

Lockable Diesel/AdBlue® Storage & Dispensing Kit

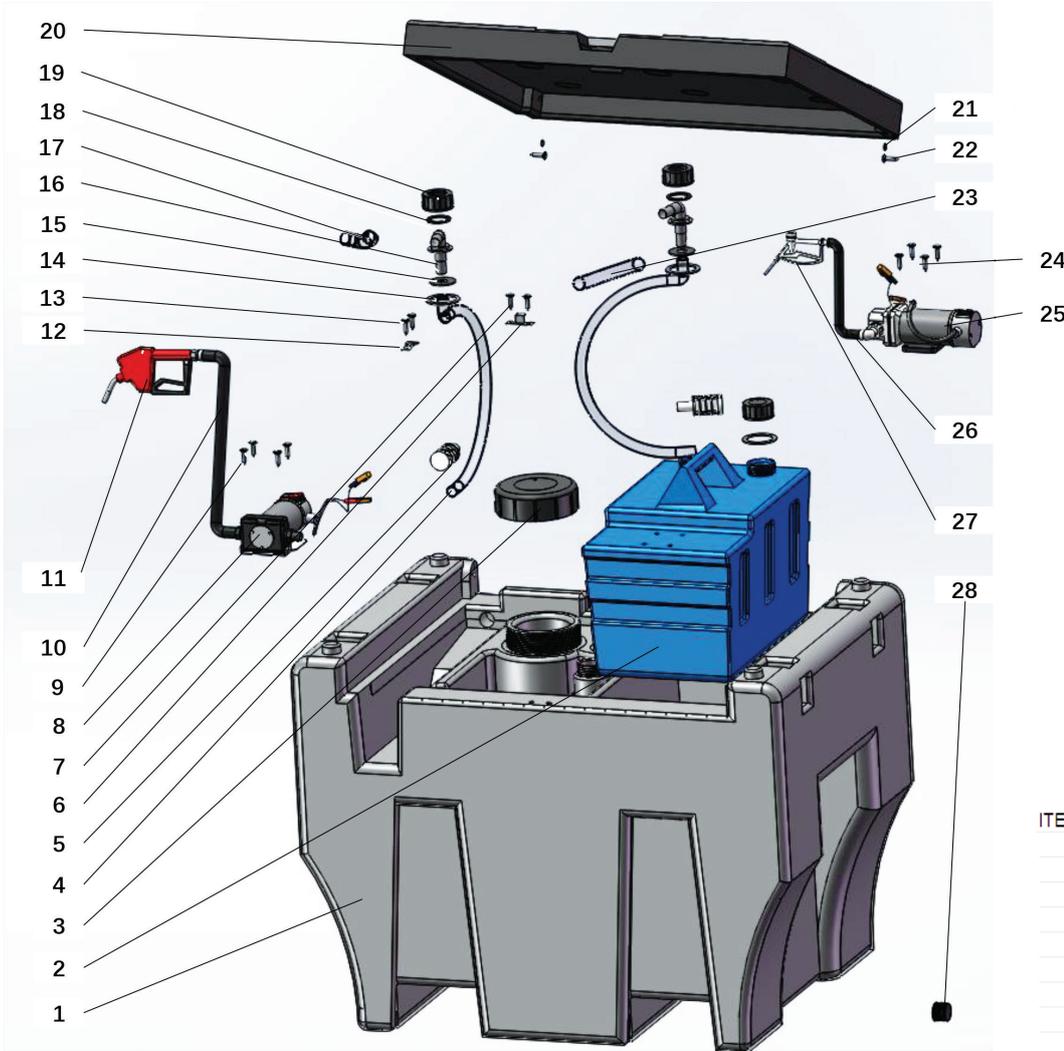

ITEM NO	DESCRIPTION	QTY
1	400L TANK BODY	1
2	50L TANK BODY	1
3	BREATHING CAP	1
4	INNER PVC HOSE	2
5	FILTER	2
6	LOCK HOLDER	1
7	BOLT	2
8	DIESEL PUMP	1
9	BOLT	4
10	NBR HOSE	1
11	DIESEL NOZZLE	1
12	NOZZLE HOLDER	1
13	BOLT	2
14	WASHER	3
15	UNDER WASHER	2
16	SUCTION FITTING	2
17	3/4 CONNECTOR HOSE	1
18	TOP WASHER	2
19	SUCTION CAP	3
20	TANK LID	1
21	SHIM	2
22	BOLT	2
23	3/4 CONNECTOR HOSE	1
24	BOLT	4
25	ADBLUE PUMP	1
26	EPDM HOSE	1
27	ADBLUE NOZZLE	1
28	SCUPPER	1

