

Description

The Alemlube automatic shut off fuel nozzles are designed for delivering diesel fuel (51037/51039) and petrol (51037P/51039P) in conjunction with an electric pump. With today's customers in mind, they are lightweight & compact yet heavy duty enough to handle the rigours of the toughest applications. The four nozzles are supplied with a 1" BSP inlet swivel as standard for ease of use. The 51037/51037P has a flow rate of up to 60 L/min while the 51039/51039P has a flow rate of up to 120 L/min. These heavy duty nozzles are fully serviceable with spare parts readily available for if required. (Not suitable for gravity feed tank applications).

Specifications

Uses	Automatic shut off nozzles for petrol transfer (51037P/51039P) with electric pumps Automatic shut off nozzles for diesel transfer (51037/51039) with electric pumps
Materials	Body: aluminium. Seals: buna-n & viton. Outlet spout: stainless steel with viton cased oil seal
Working Pressure	26psi (Not suitable with gravity feed applications).
Delivery Rate	51037/51037P up to 60 L/min; 51039/51039P up to 120 L/min
Weight	51037 - 1.25kg; 51039 - 1.6kg

Assembly Procedure Instructions

Connect the hose assembly from your electric pump to the automatic shut off fuel nozzle 1" BSP inlet swivel using thread tape to ensure there are no leaks. Tighten firmly.

Turn on the intended power source and pump and test using a small canister to ensure the automatic shut off function is working effectively. The pump motor will start to drive the vane pump head and when you open the nozzle, petrol should start to flow from the nozzle. Test it shuts off when vessel is full.

When not in use, please store your petrol nozzle in the pumps nozzle holster where possible to ensure no contaminants can enter the nozzle. Contaminating the fuel outlet spout can block the sensor pressure tube and valve thus stopping the nozzle from shutting off.

Important to note


Always be vigilant and keep an eye on your pump and auto shut off nozzle to ensure good, safe work practices are adhered to. Never walk away or leave your pump and nozzle unattended. Always keep your nozzle clean as above or failure to do so may incur repair charges and or void the manufacturer's warranty.

Limited Warranty Policy

- 1 The manufacturer warranty's this product against defects in material & craftsmanship for 24 months from date of purchase.
- 2 The manufacturer's liability is limited to the replacement or repair of the defective material within the warranty period, when returned freight prepaid to Alemlube or their designated service depot.
- 3 The warranty does not cover damage caused by accident, misuse or faulty installation.



Parts And Drawing Breakdown 51037/51037P/51039 /51039P

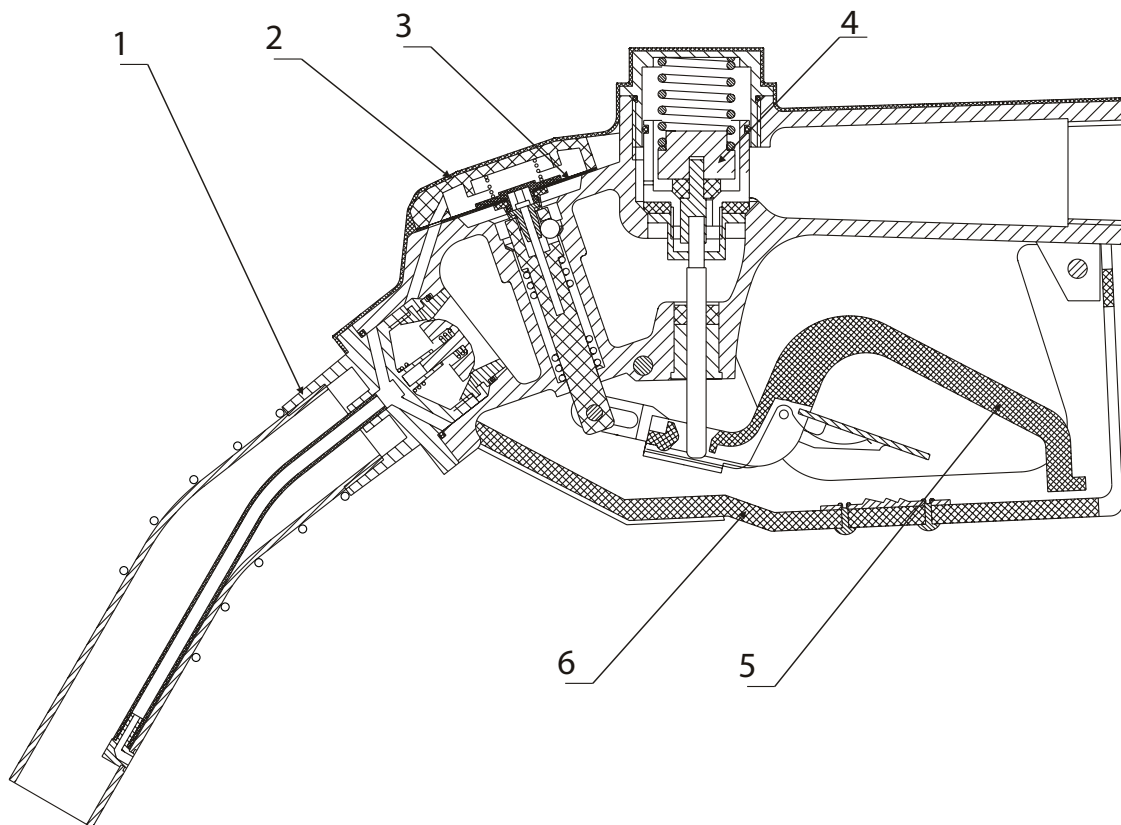

Ordering Spare Parts

Parts List – Part No. 51037/51039

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
	51037				51039		
1	51037-1	Spout 15/16"	1	1	51039-1	Spout 1-3/16"	1
2	51037-2	Protective rubber sheave	1	2	51039-2	Protective rubber sheave	1
3	51037-3	Diaphragm assembly	1	3	51039-3	Diaphragm assembly	1
4	51037-4	Main valve assembly	1	4	51039-4	Main valve assembly	1
5	51037-5	Lever assembly	1	5	51039-5	Lever assembly	1
6	51037-6	Lever guard	1	6	51039-6	Lever guard	1
-	502520	3/4" Inlet swivel	1	-	502525	1" Inlet swivel	1

Trouble Shooting

Problem	Remedy
Nozzle does not shut off	Check the minimum flow rate & the minimum & maximum pressure ratings of the nozzle vs the pump you are using. Check to see the nozzle is properly in the fill hole as liquid must cover the shut off port hole on the bottom of the spout. Check the o rings inside the spout to ensure they are not cut or missing.
Nozzle shuts off too early	Check the flow rates, they may be too high for the fill hole. Reduce the flow rate. Make sure the nozzle is properly inserted into fill hole. Adjust the angle to suit.
Nozzle continuously leaks out of the spout	Look for dirt and other contaminants in the main valve (poppet). Unscrew spout & inspect & clean valve as required.

NSW
TEL: (02) 9939 0711
FAX: (02) 9939 0411

QLD/PNG
TEL: (07) 3204 9166
FAX: (07) 3204 1224

VIC/TAS
TEL: (03) 8787 8288
FAX: (03) 8787 8266

WA
TEL: (08) 9209 3066
FAX: (08) 9209 3933

SA/NT
TEL: (08) 8241 7111
FAX: (08) 8241 7011

NZ
TEL: (09) 447 1007
FAX: (09) 447 1008